



NOTICE:

DO NOT USE LOOPED WIRE UNDER TERMINALS. BREAK WIRE RUN TO PROVIDE SUPERVISION OF CONNECTION.
VOLTAGE SUPPLIED TO SIGNAL WHEN THE PWR27A IS IN

Avis important :

Co&

Date de publication du manuel :
02/01/13