

SETTINGS:

Switch (SW1) on the PCB is used to select the speaker voltage/wattage (Table 4) and sound output level (Table 2A). See Figure 3A.

Figure 3A